


## REPLACE THE ATOMIZATION CORE:

The atomization head include:oil bottle,oil suction pipe,filter,atomization core.Take down the oil bottle,remove the atomizing core and pull out the suction pipe,then change the new atomization core and the suction pipe.

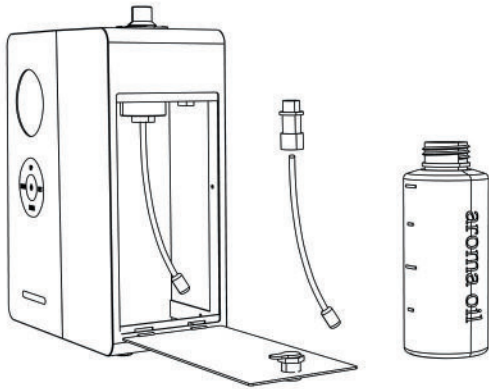

## WARRANTY:

Warranty 12 months parts and labor.

The LX1200 System is only to be used with Brilliant Scents oils. Using any other oils will damage your system and will void the warranty.

## ATTENTION/IMPORTANT:

1. Do not plug the LX1200 in overcrowded power sockets. Do not use with broken wires.
2. Do not attempt to take apart or open the LX1200, if there are any issues please contact us promptly.
3. Do not turn the LX1200 upside down or on its side after filling the tank with oil as this can result in leakage and ultimately damage the diffuser and void the warranty.

  
**BRILLIANT**  
SCENTS

  
**BRILLIANT**  
SCENTS

**LX1200 USER MANUAL**



**BRILLIANT SCENTS LX1200  
INTELLIGENT SCENTING SYSTEM**

Please read this manual carefully before use and keep safe for future reference

## INTRODUCTION:

Our LX1200 System utilizes patented proprietary cold air atomization technology that breaks down our curated oils into nanoparticles which can then be dispensed easily throughout your home in the safest, fastest, and cleanest way possible.

## MACHINE SPECIFICATIONS:

Size: W 7.2" x D 3.6" x H 9.8"	Coverage Area: Up to 1,200 Square Feet
Fragrance Oil Capacity: 200 ML	Voltage: AC 110V / 220V
Weight: 5 LBS	Power: 8W

## INCLUDED IN BOX:

LX1200 x 1, Power Adapter x 1, Oil Tank x 1, Tubing x 1, User Manual x 1

## OPERATION/INSTALLATION:

1. Unscrew the oil tank canister from the inside of the LX1200 by opening the door up on the side of the unit. Fill the oil tank with your preferred Brilliant Scents oil. Make sure the oil suction tube from the atomizer is inside of the oil tank when you are screwing it back in. Please make sure this is screwed in tightly to prevent loss of scent.
2. The wall mounting attached to the LX1200 can be attached to the wall using screws or be used on a shelf without mounting it.

## FUNCTION KEYS:

1. Light On/Off, Select, Pause the Keypad
2. Work Modes (Schedule/how long scent is dispensed or paused)
3. Used to Set Times/Dates/Misc Options
4. Used to cycle Up through options
5. Used to cycle Down through options

Press and hold down the "MODE" button for 5 seconds to reset the machine to factory settings. Press and hold "SET" for 5 seconds to lock the keypad, while pressing and holding "SET" again for 5 seconds will unlock it. Press the "ON/OFF" button to start oil atomization. Press and hold "ON/OFF" button for 5 seconds to turn ON/OFF the oil level light.

## SETTING THE MACHINE TIME/DATE AND OIL CONSUMPTION PARAMETERS:

1. When setting the time/date please keep in mind this machine operates under military time. For example, if you were setting the time as 2PM, you would actually set it as 14:00.
2. To set the current time and date press the "SET" button 1 time. You can now choose the hour of the day using the "UP" and "DOWN" buttons. Once chosen press the "SET" button a second time. Now you can set the minutes of the day using the "UP" and "DOWN" buttons. Once chosen press the "SET" button a third time. Now you can set the day of the week using the "UP" and "DOWN" buttons.
3. Press the "SET" button a fourth time to now set the oil consumption parameters. The screen should now read "VOLUME" and will have a flashing number next to it. The flashing number displayed is supposed to be how much oil is now in the tank. For example, Brilliant Scents sells 500ML bottles of oil to be used with this machine, so if you just filled a new bottle into the tank, and you are only loading 1 bottle into the oil tank at a time, you would change the flashing number to 500 by using the "UP" and "DOWN" buttons. Next press the "SET" button again to set how much is currently loaded into that tank and you will now see the word "LEVEL" next to a flashing number. You will basically want to make sure this number is the same as the "VOLUME" you just entered. Now press the "SET" button again and the LCD will now read ML/H with a number such as "5.0" flashing. We recommend leaving this setting at 2.0 ML per hour.

## EQUIPMENT MAINTENANCE:

In order to ensure that your LX1200 System is working effectively, please check and maintain your device regularly (every 30-60 days) by following the steps below:

1. Remove the oil canister from inside the unit.
2. Clean the oil canister out with Brilliant Scents cleaning solution by swishing the solution around inside of it for around 30 seconds. Dispose of the solution when done.
3. Next fill the canister with fresh cleaning solution, reconnect the oil canister into the system and turn your device on for 10-15 minutes.
4. Take out the oil canister and dispose of the cleaning solution within it. Make sure all of the solution has been removed. The canister is now ready for oil.
5. Twist the oil canister back into the system and your maintenance is now complete.

## PROGRAMMING YOUR FRAGRANCE SCHEDULE:

Press the "MODE" and "SET" buttons to change machine settings such as the current day/time, 5 different programmable schedules, how long the machine dispenses your scent/pauses the dispensing, and the intensity of the fragrance being dispensed.

A. For example, if you wanted to schedule your scent to start dispensing at 8:00AM Monday, you would start by pressing the "MODE" button. The LCD will display "EVENT 1 ON" meaning this is the START TIME of your first schedule. Press the "SET" button once and you will see the hours flashing. You can now change this number to 08 using the "UP" and "DOWN" buttons. You would press the "SET" button a second time to change the minutes. Press the "SET" button a third time to adjust the days of the week.

You will see an arrow under any days that are currently under this schedule. To add/remove days, select the day using the "UP" and "DOWN" buttons and press the "ON/OFF" button (which is located between the "UP" and "DOWN" keys) to select and add a day to the schedule.

B. After scheduling the times/days for the system, you will now need to schedule how long the system dispenses your scent/pauses between each scent burst. Press the "MODE" button a fourth time and you will reach the screen that reads "1 WORK" with a flashing number. The flashing number is how many seconds the machine will dispense your scent for at a time. After setting this to your desired amount, press the "MODE" button a fifth time and you will reach a screen that reads "1 PAUSE" with a flashing number. The flashing number is how many seconds the machine will pause for between the dispensing of your scent. For example, if you set the "1 WORK" screen to 60, and set the "1 PAUSE" screen to 180, the machine would dispense your scent for 60 seconds, and then pause for 180 seconds before dispensing again. Please keep in mind that this number is set in 5 second increments ranging anywhere from 5 seconds to 300 seconds.

C. After setting your first schedule, you will still have 4 other scent schedules available to you, and you can access the next one of these by pressing "MODE" for a sixth time and following the same instructions as above