




LX3000 V.2 Luxury Scenting System




USER MANUAL


Operation

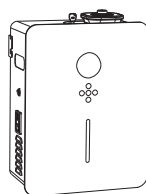


①Unlock the atomization head by the key.

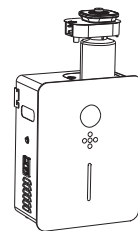

②Take out the atomization head

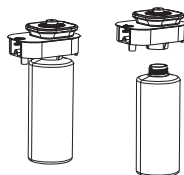

③Rotate the oil bottle out in a clockwise direction,fill the oil then rotate the bottle back in anti-clockwise direction.

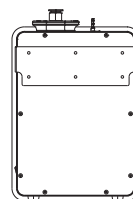

④Put the atomization head back machine then lock it.


Wall mounting: fix the panel to the wall with screws, then hang the equipment on the panel.

What's included

LX system x1, Power Adapter x1, Oil Canister x1, Key x2, Atomization core x1, Hanging Hardware x1, User Manual x1

Function Keys

- ①Light on/off,select,Pause Keypad
- ②Work Model,Atomizing frequency,Page keypad
- ③Time and set keypad
- ④Up keypad
- ⑤Down keypad

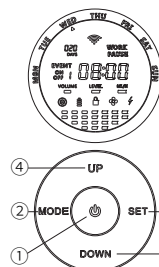

Press MODE for 5 seconds to reset the system. Press Set 5 seconds to lock all keypads, then Press Set 5 seconds again to unlock the system if it is locked. Press on/off to pause or start the atomization. Press the on/off 5 seconds to turn on /off the oil level light.

Oil level	>50%	<50%	<25%
Light Color	Green	Blue	Red

Time Setting -24HR and set the Oil consumption parameter

- ①The working time of the equipment is based on local time.- Press set to set the clock time, Press Up and down to change the hour, minutes and days.
- ②Press Set to switch the capacity of the oil canister>Oil level>M-L/H consumption amount of oil, change the consumption amount of oil in the canister by the Up and down button, then the usage days will be shown in the LCD display.

Program Settings

Press [MODE] and [SET] to Adjust different functions, including the local time, 5 different customized work periods, Work/Pause interval time, aroma concentration.

A. If you want to set the working time as 8:00 AM Monday, press the MODE button, the LCD display will show [EVENT 1 ON] which means that is the START TIME of the first event. Then, press [SET] to program the time you want inputted. Press [UP/DOWN] to adjust the hours, minutes and working days in this event. Press Up and Down when confirming the work days of the week then press ON/OFF button. The days with ▲ sign means these days are the days that are chosen. Press the [MODE] the LCD display now shows the factory-set time, and the machine can set 5 working time events/periods. Example: you can set 08:00-10:00,11:00-12:00, and 13:00-14:00.

Note:

- 1 Running time setting, the shutdown time can not precede the start time;
- 2 If the running time needs to span 00:00, set two time periods, such as the first time period 08:00-23:58, the second time period 00:02-06:00.

B. After you set the start and pause time, Press Mode again to set the aroma Work/Pause interval time - example: Work 60 seconds/ Pause 180 seconds.

C. After finishing A and B, if you need to continue to set a working period, continue to press [MODE] to finish additional events.

Aroma concentration

Fragrance timer can be set to work as low as 5 seconds to 300 seconds on in 5 second increments and Pause time can be set to as little as 5 seconds off up to 300 seconds off. We suggest the settings to be 60S on / 180S off for optimal use of the monthly 500ml bottle of oil.

System Maintenance


To keep the integrity of your LX system, easy basic maintenance is required. Brilliant Scents cleaning solution or 90% rubbing proof alcohol should be added into the oil canister every 30-60 days to clean the inside nozzle and other parts inside the LX system. Because alcohol does not have the same properties as does oil your diffuser will not diffuse any alcohol smell out of it through your space. Add 90% or higher rubbing alcohol into the oil canister, turn on the system and run for 20-30 minutes, then turn off the equipment and pour out the alcohol, wash out the canister with water and let it dry before refilling it with your new Brilliant Scents oil refill.

How to change the Atomization Core (if ever needed)

The atomizer includes the oil bottle, oil suction pipe, filter, atomization core. Remove the oil canister, then remove the atomizing core and pull out the suction pipe, next change the new atomization core and the suction pipe.

How to change the Atomization Core (If ever needed)

The atomization head include:oil bottle,oil suction pipe,filter,atomization core.Take down the oil bottle,remove the atomizing core and pull out the suction pipe,then change the new atomization core and the suction pipe.

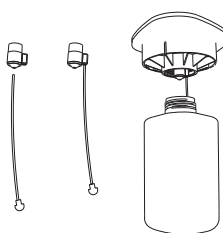

Product Specs

Size: 11.6" W x 6.3" D x 15.75" H Weight: 17 pounds

Voltage: AC 110V / 220V Power: 28W

Coverage: Up to 3,500 square feet

Warranty

The Warranty for your LX system is 2 years parts & labor LX3000 V.2 System is only to be used with Brilliant Scents oils. Using any other oils will damage your system and will void the warranty.

Attention/Important:

1. Do not plug the LX3000 V.2 in overcrowded power sockets. Do not use with broken wires.
2. Do not attempt to take apart or open the LX3000 V.2, if there are any issues please contact us promptly.
3. Do not turn the LX3000 V.2 upside down or on its side after filling the tank with oil as this can result in leakage and ultimately damage the diffuser and void the warranty.