

 


## LX2200 Luxury Scenting System




USER MANUAL


### Operation

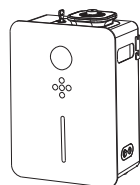

 
①Unlock the atomization head by the key.

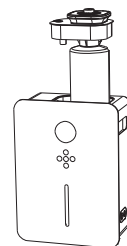

②Take out the atomization head.

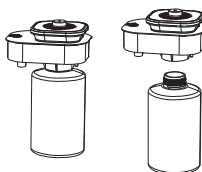 

 ③Rotate the oil bottle out in a clockwise direction,fill the oil then rotate the bottle back in anti-clockwise direction.

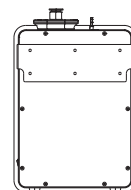

④Put the atomization head back machine then lock it.


Wall mounting: fix the panel to the wall with screws, then hang the equipment on the panel.

### What's included

 Equipment x1、 Power Adapter x1、 Bottle x1、 Key x2、 Atomization core x1、 Hanging Panel x1、 User Manual x1

### Function Keys

- ①Light on/off,select,Pause Keypad
- ②Work Model,Atomizing frequency,Page keypad
- ③Time and set keypad
- ④Up keypad
- ⑤Down keypad

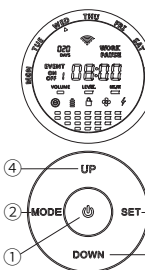

Press MODE 5 seconds to reset the machine and WIFI model.Press Set 5 seconds to lock all keypads,then Press Set 5 seconds again to unlock.Press on/off to pause or start the atomization.Press the on/off 5 seconds to turn on /off the oil level light.

Oil level	>50%	<50%	<25%
Light Color	Green	Blue	Red

### Time Setting -24HR and set the Oil consumption parameter

- ①The working time of the equipment is based on local time.- Press set to set the clock time,Press Up and down to change the hour,minuter and day.E.g:8:30AM Monday.
- ②Press Set to switch the capacity of oil bottle>Oil level>ML/H consumption parameter,change the parameter by Up and down,then the usage days will be showed in the LCD display.

### Working mode and atomizing setting

Press [MODE] and [SET] to Adjust different function, including the local Time、 5 different groups working periods、 Work/Pause interval time、 aroma concentration.

**A.** E.g: If you want to set the working time as 8:00AM,Monday.Press Model,the LCD display will show [EVENT 1 ON]means it is the START TIME of first group. Then, press [SET]to do the program setting, Press [UP/DOWN]to adjust the hours,minutes and needed working days group.Press Up and Down when confirm the work days of one week then press ON/OFF keypad.The days with ▲ sign means these days are chosen.

Press the [MODE] key for the first time, the LCD display shows the factory-set time, and the machine can set 5 working time periods. Example: Set 08:00-10:00,11:00-12:00, and 13:00-14:00. Over 00:00, just set two time periods, such as the first time period 08:00-23:58, the second time period 00:02-06:00.

**Note:** ① Running time settings, the shutdown time can not precede the start time; ② If the running time needs to span 00:00, set two time periods, such as the first time period 08:00-23:58, the second time period 00:02-06:00.

**B.** After set the start and off time,Press Model again to set the aroma Work/Pause interval time,E.g:Work 10 seconds,Pause 60 seconds.

**C.** After finish A and B.If continue to set working period, continue to press [MODE]to finish all 4 working groups at the same method.

### Aroma concentration

Atomize aroma time can be set:5S、 10S、 15S、 20S、 25S、 30S、 35S、 40S、 45S、 50S、 ...300S.Pause time can be set:5S、 10S、 15S、 20S、 25S、 30S、 35S、 40S、 45S、 50S、 ...300S.The energy column is fluctuating when atomizing.

### Equipment Maintenance

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment.Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.

Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after , then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

### Product Specs

 
Size: W248xD130xH350mm Weight: 5.65kg

Voltage: DC12V Capacity: 800ml

Power: 17W Coverage: 2000-3000 m<sup>3</sup>

### Change the Atomization core

The atomization head include:oil bottle,oil suction pipe,filter,atomization core.Take down the oil bottle,remove the atomizing core and pull out the suction pipe,then change the new atomization core and the suction pipe.

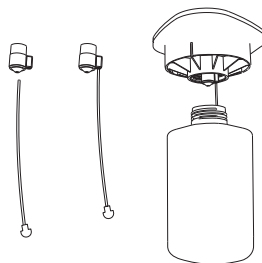

### Warranty

- 1.The Warranty is suitable for new machine but not resell or second hand products.
- 2.Within 12 months after purchase date, Warranty is offered for all qualified machines. During warranty,we will offer repair services and the free parts but without essential oil.
- 3.The warranty card & purchase Invoice are needed if after service required. Please contact with us within warranty if any problems.
- 4.The following is not for free warranty service:
  - ①Damage & problems caused by Accidents & Fire.
  - ②Not use properly and wrong operation.
  - ③If repaired by not professional person and make some parts damaged.
  - ④Damaged during transportation.
  - ⑤Without our warranty card.
  - ⑥Without proper cleaning for a long time
  - ⑦The machine work time out.
  - ⑧Machines & Parts not from us.
  - ⑨Machines not gotten from official channels.
  - ⑩Send the machines back without permit from manufacturer.

### Notice

- 1.Please carefully read the Instruction before installation, and keep the User manual to check if need at anytime
- 2.Please make sure the machine upright ,no leaking and no down; or may damage the device and parts
- 3.Please do not use the broken power wire and make sure the power supply is suitable for the machine, or may cause fire .
- 4.Please do not open the machine by yourself, If problems, please contact us promptly !