210.00 mm

TROUBLESHOOT STEPS

Issue	Troubleshoot steps
NO MISUNG	Check the power supply Check the "Misting hole" to see if the device is pumping air Ensure that the top part of the diffuser is tightened with the bottom by turning it clockwise Ensure that the bottle is tightened into the diffuser head

WARRANTY

Your LX500 V.2 comes with a 6-month warranty. Please ensure that you have proof of purchase in case a claim arises. Please note that the warranty is non-transferable.

The following will not be covered under warranty:

- Using fragrance oils not manufactured by Brilliant Scents.
- If the diffuser is not cleaned with our KEEP IT CLEAN cleaning solution between fragrance changes or at least once every 30 days.
- If the diffuser is tipped over on its side or upside down, causing internal oil leakage, the warranty will be voided. The unit must always be kept in an upright position.

MAINTAINANCE

Your LX500 v.2 must be cleaned once per month with our KEEP IT CLEAN solution or between fragrance changes for optimal performance.

To use the KEEP IT CLEAN Solution:

- Empty remaining fragrance oil from within the bottle.
- Pour in the KEEP IT CLEAN solution, filling the bottle ½ way.
- Reconnect the bottle to your diffuser and let it run for 15 minutes.
- Discard any solution remaining in the bottle.
- Continue using your diffuser like normal with your choice fragrance.



SAFETY

- The diffuser should be used in an upright position at all times. Do not tilt the diffuser as the oil can spill inside, damaging the diffuser.
- Do not use the diffuser with any other power cords. Please use the original power cord that comes with the diffuser.

REPLACEMENT PARTS



1. Unplug the diffuser and remove the fragrance bottle. Pull out the small tube. Use needle-nose pliers to gently remove.



2. Replace it with a new nozzle and ensure the nozzle is pressed very firmly into the top of the diffuser. Then reinsert the tube to the nozzle.

It is very important that you put the tube into the correct position of the nozzle, otherwise the device will not diffuse scent. Within the nozzle there is a small round tube holder that the tube needs to be firmly secured into. TIP: If you have difficulty to see the tube holder in the nozzle, hold a flashlight into the nozzle to increase





(LX500 V.2 User Manual)

LX500 V.2 INTRODUCTION

Designed with your safety and satisfaction in mind, the LX500 V.2 boasts enhanced power and utilizes proprietary cold air technology for the cleanest and safest way to diffuse fragrance throughout your space. Whether you are looking to create a relaxing ambiance, invigorate your senses, or simply elevate the atmosphere of your environment, the LX500 V.2 is here to exceed your expectations.

Uses advanced atomization technology which makes it residue free and safe for pets, children, artwork, and furniture. This model comes with an easy to use remote control.



TECHNICAL FEATURES

Model.: LX500 V.2 Power: 10W Noise: <28 db Coverage: 800 sq.ft Oil bottle capacity: 50mL/120mL

- Inside the box includes: LX500 V.2, an empty 120ml bottle, remote control, USB cable, power adapter, and user manual.
- The remote control is designed for convenient adjustments of fragrance concentration levels, and usage timer.
- Swap the image of our remote control in this section.



HOW TO USE



Step 1: Remove Empty Bottle

 Twist the upper part of the diffuser counter-clockwise to take out the empty bottle.



Step 2: Add The Fragrance Oil

- Rotate the bottle counter-clockwise to remove it. Add your fragrance oil.
- Directly screw-in your Brilliant Scents 50ml or 120ml bottle of fragrance.



Step 3: Reinsert The Bottle And Upper Part

• Reinsert the upper part of the LX500 V.2. • Twist clockwise to ensure a tight fit.



Step 4: Power On the Diffuser

• Use the remote to turn on the diffuser or hold the large light indicator on the front for 2 seconds.

CHARGING GUIDE



Method 1



Method 2

Method 1: Charge power via type-C cable directly. Method 2: Charge power via wireless charging base.

LIGHT INDICATOR / DEVICE FUNCTION



The light indicator on the front of the diffuser works as both a power button if held down for 2 seconds and a timer indicator once the device is turned on.

* The default setting is set to "low" with a 4-hour timer

POWER CONTROL VIA DEVICE

Press and hold the light indicator for 2-seconds to power on / off the device.

FRAGRANCE INTENSITY

By default, the LX500 V.2 will turn-on at low intensity. Please use the remote to select Medium or High intensity.

TIMER SETTINGS

Fragrance timer is displayed via the white lights at the bottom of the Intensity increases with each light indicator.


You can cycle through the timer settings by pressing the light indicator

1 Light - 1 Hour

2 Lights - 2 Hours 3 Lights - 4 Hours

4 Lights - 8 Hours

REMOTE CONTROL

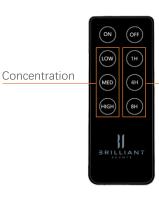

Timer Setting

HOW TO USE REMOTE CONTROL

- (NO) Press to turn on device.
- (OFF) Press to turn device off.

The setting below determine how long the device will mist before turning off and this cycle continues until the set time interval is completed:

- The diffuser will emit the scent for 30s, followed by a pause of 300s.
- The diffuser will emit the scent for 30s, followed by a pause of 180s. (HIGH) The diffuser will emit the scent for 30s, followed by a pause of 60s.
- Timer setting allows the diffuser to run continuously for a specified period of time and automatically turn off.

(1H) 1 hour

(4H) 4 hours

